



## Diesel engines


Replace fuel prefilter. Run engine and check for leaks.

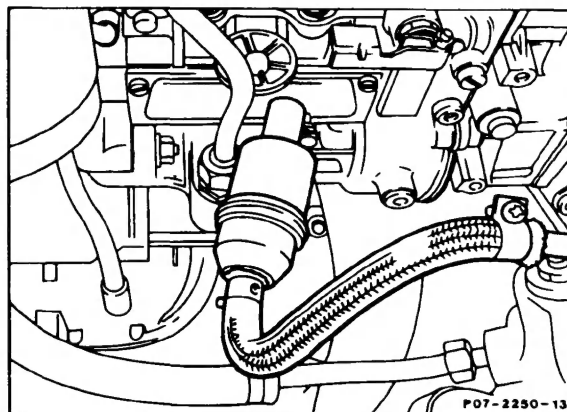


Engine 616, 617

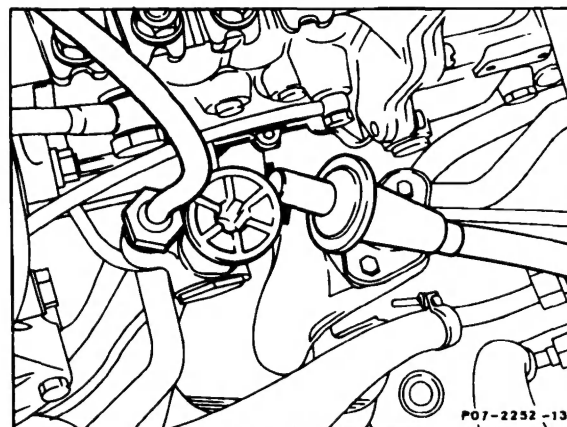

Engine 616, 617

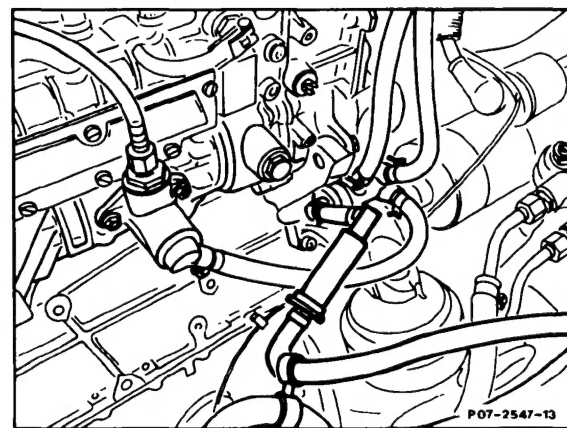

Engine 601.91, 602.91

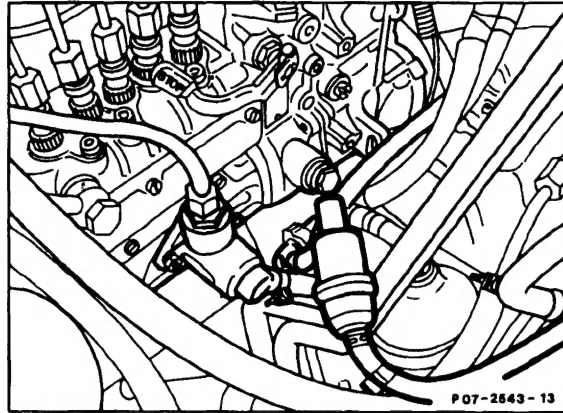

Engine 602.96, 603.96, 603.97